



Fitting the brackets

The brackets offer three methods of installation:

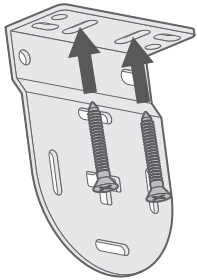


Top-Fixing

Where the brackets are screwed into the lintel (or 'ceiling' of the recess)

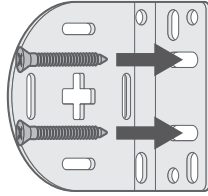

Face-Fixing

Where the brackets are screwed onto a facing surface (a wall or window frame)

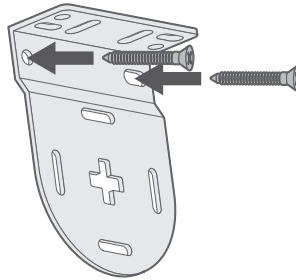


Side-Fixing

Where the brackets are screwed into the side walls of the recess


Top Tip

Top-fixing or face-fixing are recommended for most installations, whereas **side-fixing is only recommended if the width you gave us was taken right at the top of the recess.**

Fitting the blind

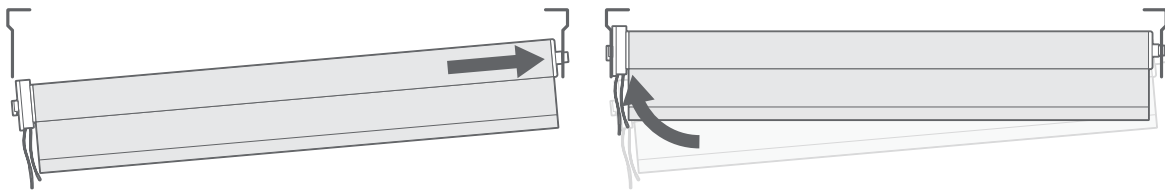

Locate the depression end (the opposite end to the controls) of the blind into the circular hole in the corresponding bracket. Lift the control end of the blind and slot the rectangular 'lugs' into the corresponding slots on the bracket.

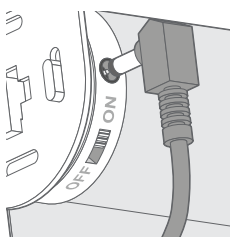

Once your blind is installed we recommend plugging in the motor to allow it to fully charge before use.

Plug the charging cable (included) into the motor charging port and allow to charge until the LED on the charger plug turns green.

Download the SmartView App



On the front of the swing tag that comes with your blind, you'll find a handy QR code you can scan with your phone. Scan this to download the SmartView app - you'll be setting up your blinds in moments!